





Land Cruiser 73-74 Series Auxiliary Fuel Tank 1985-1999 21 gallons

Direct-fit extended range fuel tank to serve expedition, long-distance travel and hauling needs. Buy fuel when the price is right and be prepared for the long haul.

Built by specialists with three decades of experience, serving customers around the world.

Part Number TLC73A

Type Auxiliary

Capacity - Gallons 21

Fill Point New Fill Point

Fuel Petrol or Diesel

Location LH of Driveshaft

Relocate Spare No

Exhaust Modify

\$1,545

Price



Based in Melbourne, Australia, Long Range Automotive uses the latest 3D modeling software to design and build over 200 different tank models. Precision CAD 3D models and drawings are produced for all tanks. LRA uses a Hypertherm CNC plasma profile cutting system with True Hole technology to ensure accuracy. All welds are full penetration corner to corner MIG welded, using a high quality inert shielding gas and level layer wound MIG wire to ensure good welding penetration and exclusion of porosity in the weld. Tanks are fully internally baffled and an expansion chamber is incorporated in the design of the tank.

All tanks are pressure tested and checked by two separate quality control procedures. Every kit includes brass threaded hose barb fittings, stainless steel hose clamps and high tensile bolts with Nyloc nuts.









A tank and a team you can trust

Additional product information:

- Works with OEM emission systems, if any
- Kit includes all fittings and parts, with instructions
- Uses new fuel door and inlet to service auxiliary tank
- A combination fuel gauge/transfer pump control module is included.
- o Constructed of 2 mm T125C aluminized steel.
- More about aluminized steel https://en.wikipedia.org/wiki/Aluminized steel

Shipping information:

- Tanks ship from Stockton, California by motor freight, wrapped and strapped to a standard pallet
- Single tank shipping varies from \$150 to \$300 within Continental US added charges may apply for residential deliveries and deliveries requiring lift gate for offloading pallet

Important disclosures:

- This product is designed to suit vehicles as delivered when new. Modifications such as suspension, skid plates, bumpers and other aftermarket additions may impact or prevent installation.
- This product is NOT FOR SALE TO CALIFORNIA RESIDENTS.
- This product has not been approved, certified, rated or otherwise passed upon by any federal or state regulatory agency, nor has it been tested or approved by any testing or certification body.
- Neither Long Range Automotive or Cruiser Brothers, LLC have any control over the installation or use of this product. Cruiser Brothers, LLC highly recommends that certified professionals install this products described herein.
- Buyers must rely upon their own skill and judgment in evaluating the installation of this product and are solely responsible for the product's use.

See our tank video on YouTube – https://www.youtube.com/watch?v=3dx19C60xEA



Parts that Get You Home

Cruiser Brothers, LLC is proud to support a range of Australian manufacturers as importers and distributors of unique and proven solutions for offroad travel, towing and extreme conditions. Since 2015, we have partnered with leading brands that include **Terrain Tamer**, **Harrop Engin**eering, **Long Range Automotive**, **Wholesale Automatic Transmissions** and **FlashLube**. Visit or call us at:





Auxiliary Tank Combination Switch / Gauge

Adding fuel:

NEW FILL POINT - Installer will mount a new fill point (with second fuel cap) on the body – requires a hole to be drilled. The auxiliary tank is filled at that location

Fuel transfer:

- To move fuel from aux tank to main tank, press the button_
- You may transfer fuel while driving
- During operation, you will hear the pump operating (kind of a "tic-toc" sound) and that is normal
- The pump will shut itself off as below
- The pump and transfer line directs fuel into the fill tube downstream from the fuel filler
- If you somehow happen to overfill the main tank, it will simply drain back down to the auxiliary tank







Auxiliary Tank Combination Switch / Gauge

The LRA-PG210 Switch/Gauge unit fuel display functions as as follows:

- 1. The RED and GREEN lights display the contents of the auxiliary rank.
- 2. All GREEN shows FULL



3. RED Flashing Light showing EMPTY



4. When the switch is turned **ON** and the **ORANGE** light is displayed this indicates that fuel is being transferred from the auxiliary tanks into the main tank.



- 5. Fuel is transferred at around 2 liters per minute.
- 6. Fuel will be transferred from the auxiliary tank into the main tank until the auxiliary gauge shows a RED flashing light at which point the pump will continue to run for 2 minutes and then the buzzer will sound and the pump will automatically shut off.
- 7. You can restart the pump by simply pushing the switch button again, the pump will run again for another 2 minutes before automatically shutting off.
- **8. OPTIONAL**: It is also possible to connect the switch to the OEM fuel gauge to shut the transfer pump off when the OEM tank is full. Please consult a qualified auto electrical shop.

DO NOT OPERATE TRANSFER PUMP WITHOUT FUEL IN AUXILIARY TANK Pump failure may result otherwise

DO NOT OVERFILL OR TOP OFF –
This practice can damage your emission system